



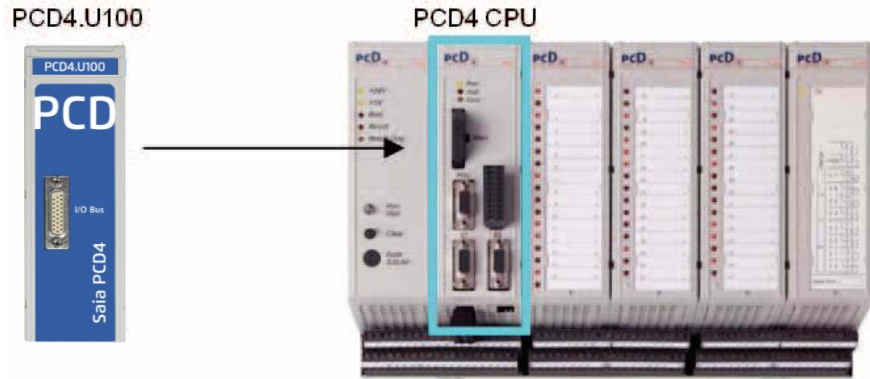


PCD4.U100 Kit



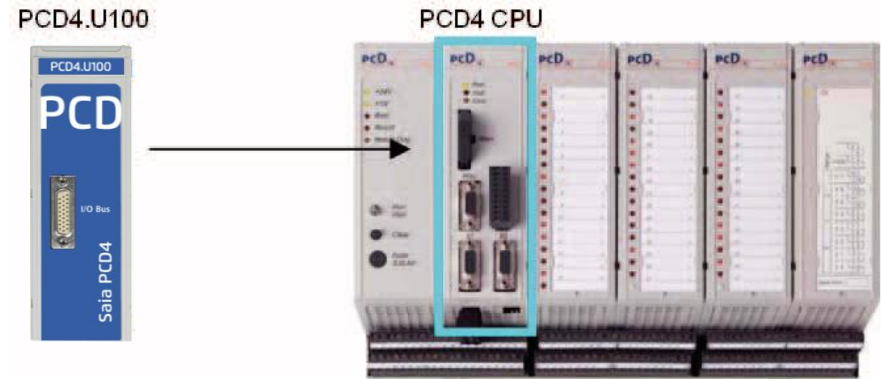


PCD4.U100 Kit



System requirements

PCD2.M5xxx	With NT OS (Minimum FW 1.10.16 or higher)
PCD3.Mxxxx	With NT OS (Minimum FW 1.10.16 or higher)
 Power Supply Module PCD4.N2x0	<p>Hardware Version B or newer;</p> <p> The use of an older module can damage the PCD4.U100</p> <ul style="list-style-type: none"> Check the sticker on the PCD4.N210 If the hardware version is "B" or newer, the module can be used with a PCD4.U100 If the sticker is no longer present the printed circuit board inside the module can be checked; if the number printed on the board is "4 431 5271 0", the module can be used together with a PCD4.U100
 Not supported PCD4 I/O Modules	PCD4.Hxxx (All PCD4.Hxxx modules are not supported)

System requirements

PCD2.M5xxx	With NT OS (Minimum FW 1.10.16 or higher)
PCD3.Mxxxx	With NT OS (Minimum FW 1.10.16 or higher)
 Power Supply Module PCD4.N2x0	<p>Hardware Version B or newer;</p> <p> The use of an older module can damage the PCD4.U100</p> <ul style="list-style-type: none"> Check the sticker on the PCD4.N210 If the hardware version is "B" or newer, the module can be used with a PCD4.U100 If the sticker is no longer present the printed circuit board inside the module can be checked; if the number printed on the board is "4 431 5271 0", the module can be used together with a PCD4.U100
 Not supported PCD4 I/O Modules	PCD4.Hxxx (All PCD4.Hxxx modules are not supported)