

How to update the firmware of a PCD2/3.F2xx communication module?

This note applies to the communication modules for M-Bus and DALI only!

M-Bus

- PCD2.F2700
- PCD2.F2710
- PCD2.F2720
- PCD2.F2730

- PCD3.F270
- PCD3.F271
- PCD3.F272
- PCD3.F273

DALI

 
- PCD2.F2610
- PCD3.F261

The internal firmware of these modules can be updated by the Saia Firmware Downloader tool from version SP2.0.200 and requires a PCD firmware 1.16.49 or more recent.




1. Connect your PC with the PCD over Ethernet or USB.

2. Start the Saia Firmware Download Tool


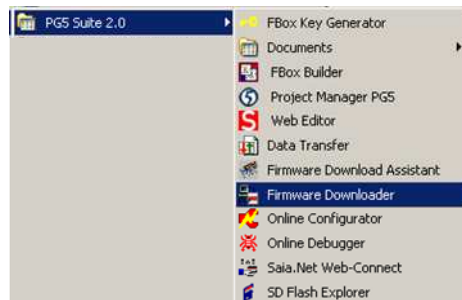


 3. Add the firmware file (.blk) to the "Files to Download" window

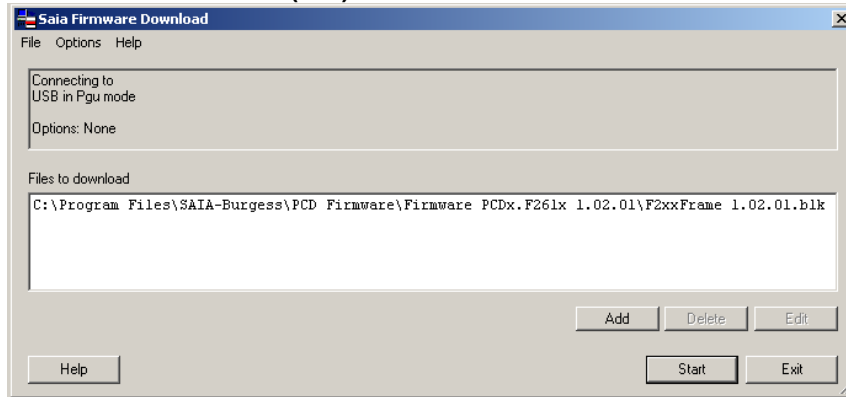

4. Select the IO-Slot

  By default the firmware downloader will look for the first module beginning from IO-Slot 0. When more than one of these modules is plugged, please select the corresponding IO-Slot before you start the firmware download.

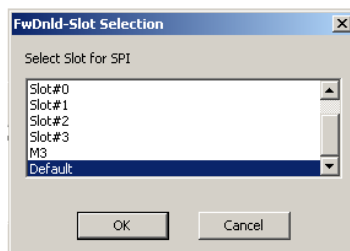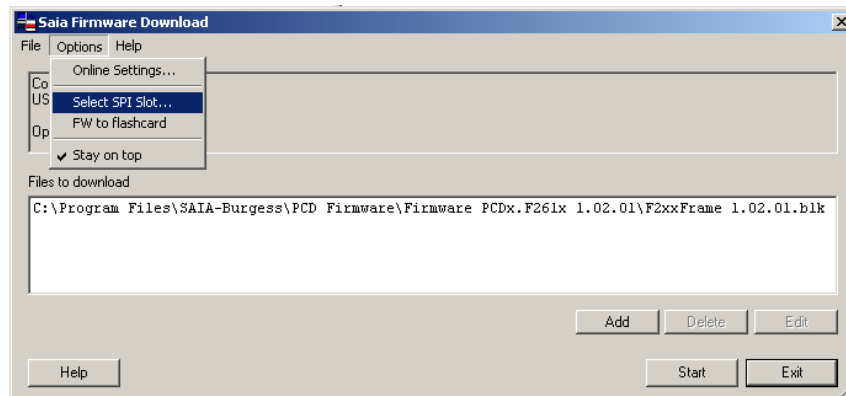

5. Download the firmware to the PCD

