PCD7.L100 Input module with 4 digital inputs, 24 VDC



The RIO module was developed as a S-Bus data node for local switching tasks. Via a DDC of the type PCDx / PCS1 inputs can be read and manual/auto function monitored. Two address switches (x1 / x10) on the front panel allow module addressing and identification. Addresses can be set between 00 and 99. Up to 100 RIO modules and a maximum of 3 PCD stations can be connected to one bus branch simultaneously. If the bus cycle time is critical, fewer than 30 slaves should be operated in one segment.

Technical data

S-Bus Bus system 1200... 38400 Transmission rate Transmission mode Parity / Data

Bus length max. Nominal voltage UN 1200 m (without repeater) 18 VDC...32 VDC / 20 VAC...28 VAC <20 mADC / <30 mAAC

Current consumption Power consumption 0.5 W / 0.7 VA

Relative duty cycle Reaction time 100 %

(from receive data to send data reaction) Recovery time < 3 s

Operating temperature range Storage temperature range

0°C... +55°C -25°C...+70°C Protective wiring

Reverse battery protection of service voltage Reverse battery protection of supply and bus EMC according to DIN EN 61000-6-2 Input state indicator Green LED for bus activity Function indicator Status indicator Red LED for bus error message Manual control level with revertive

Special features communication via bus; Inputs electrically isolated Test voltage input / bus 2500 VAC / 50 Hz / 1 min.

Signal inputs Input voltage max 30 VDC Input current (24 VDC) High signal recognition 6 mA > 7 VDC Low signal recognition < 3 VDC

Housing

Protection class (DIN 40050) Humidity class Housing IP50 / Terminals IP20 F (DIN 40040)

Connection cross-section Plug-in terminal 2.5 mm² (terminals) 1.0 mm² (screw-type)

Mounting position Weight

Housing dimensions $WxHxD: 35 \times 70 \times 74 \text{ mm}$

After 15 modules have been joined in sequence or a maximum supply current of 2 A (AC or DC) Joined without spacing

per port on the powersupply, the external supply voltage must be reapplied.

PCD7.L100 RAIL



Screw terminals. 2.5 mm², 1.0 mm² for supply voltage and bus

Mounting and commissioning to be conform with


- Power-off the installation
- Place module onto 35 mm tophat rail and press
- down to engage. Strip insulation from 7 mm of cable (max. single wire 4 mm², fine strand 2.5 mm², diameter 0.3 mm to 2.7 mm), insert into binding and tighten with a screwdriver.

Connect supply voltage and field bus to plug-in screw

Caution!!

Plug-in terminal has max. 1.0 mm² connection cross-section. Check correct connection of bus lines and supply.

Supply and Bus concept

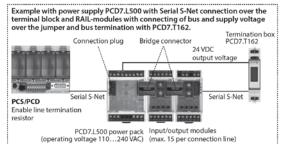

Operational safety:

Please take care to following points for a safety operation:

- Maximal cable length
- S-Bus member and segment division
- Potential compensation by one single grounding of power supply
- Termination of both network sides
- Cable shield grounding on one

Data transmission

All S-Bus instructions (level 1) are recognized. Instructions that have no function in the device are answered with <NAK>. The module has integral, automatic baud rate and transmission mode recognition.

"Display Input / Display Output" Channel 1 to 8 can be called together

Baud rate setting (Baud kbit/s)

<u>Address</u>	<u>Information</u>	<u>Address</u>	<u>Information</u>
1	0= Status Channel 1 off	5	0= Status Channel 1 switched via bus
	1= Status Channel 1 on (Signal:0=<3 VDC 1=>7 VDC)		1= Status Channel 1 switched via manual control
2	0= Status Channel 2 off	6	0= Status Channel 2 switched via bus
	1= Status Channel 2 on (Signal:0=<3 VDC 1=>7 VDC)		1= Status Channel 2 switched via manual control
3	0= Status Channel 3 off	7	0= Status Channel 3 switched via bus
	1= Status Channel 3 on (Signal:0=<3 VDC 1=>7 VDC)		1= Status Channel 3 switched via manual control
4	0= Status Channel 4 off	8	0= Status Channel 4 switched via bus
	1= Status Channel 4 on (Signal:0=<3 VDC 1=>7 VDC)		1= Status Channel 4 switched via manual control

"Display Register Information

5	Baud rate (plain text => kBit/s)		0= Device did not recognize last transmiss
6	Module address	Bit 1:	1= Last transmission was a broadcast
7	Status register		0= Last transmission was not a broadcast
8	Bus timer	Bit 2:	1= Last transmission came from master
9	Current transmission mode (data / parity)		0= Last transmission came from a slave
10	Bus error counter (divided into 4 bytes)	Bit 3:	1= CRC of last message was correct
			0= CRC of last message was incorrect
e following registers can be called together		Bit 5:	1= Device has executed an internal reset
isplay Register "x" to "y") 5 to 7 / 8 to 10			0= Device function is OK
		Bit 8:	1= Internal bus to EEPROM is OK

"Write Register Value

The


<u>Address</u>

Э	4	1 200	
	5	2 400	
	6	4 800	
	7	9 600	
	8	19 200	
	9	38 400	
<u>Address</u>	Value range	Meaning	
8	2 <-> 20	20 <-> 200 ms	


Status register:

Bit 0:	1= Device recognized last transmission
	0= Device did not recognize last transmiss
Bit 1:	1= Last transmission was a broadcast
	0= Last transmission was not a broadcast
Bit 2:	1= Last transmission came from master
	0= Last transmission came from a slave
Bit 3:	1= CRC of last message was correct
	0= CRC of last message was incorrect
Bit 5:	1= Device has executed an internal reset
	0= Device function is OK
Bit 8:	1= Internal bus to EEPROM is OK
	0= Internal bus not working perfectly
Bit 9:	1= EEPROM data memory is OK
	0= EEPROM data memory is faulty
Bit 10:	1= Baud rate uploaded from EEPROM
	0= Baud rate is at default value (9600 Bd.)
Bit 12:	Switch 1: 0=Automatic 1=Manuel
Bit 13	Switch 2: 0=Automatic 1=Manuel
Bit 14	Switch 3: 0=Automatic 1=Manuel
Bit 15	Switch 4: 0=Automatic 1=Manuel

Connection example

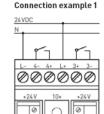

Connection example 2

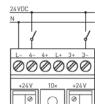

Bus timer (register 8)

The value displayed indicates how long the module waits until a telegram is complete. The time is shown in 10 ms steps (e.g.: value 20 => a time of 200 ms). The recommended time is 100 ms, i.e. a register value of 10. If the time is reduced, modules will react faster to telegrams from the master. If there is a heavy load on the master station, a bus timer setting that is too low may lead to lost telegrams. Times of less than 20 ms (value 2) are not permitted.

Times that reach the master station within 20 ms of the timeout will lead to lost connections. The value is stored in EEPROM and protected against voltage loss. (Factory setting : 2)

All other bits are reserved for factory tests.

"Write Register' Address 9 Value

The write output instruction at address 255 is recognized as broadcast message

Automatic baud function: "Write or Display output 255" (1 = autobaud active / 0 = autobaud inactive)

After a power failure, the last baud rate set will be reinstalled.

The autobaud function must not be turned on permanently, but only on the commissioning. At the condition as supplied to the customer, the autobaud is turned on, to adjust the device automatically to the system. But after the commisioning it has to be switched-off via bus command

Address 10 Value Meaning Reset of error

count register

Meaning Parity mode

Data mode (factory setting)

For further information on the use of modules linked to S-Bus, including all restrictions,

see documentation 26/339 EN

